

PRO RYDE[®] SUSPENSION SYSTEMS

EXACTLY THE WAY YOU WANT IT.™

PRO RYDE FRONT SWAY BAR RELOCATION KIT INSTALLATION

CHEVROLET COLORADO & GMC CANYON 2015 AND NEWER IMPORTANT!

Read ALL WARNINGS and information contained in these instructions PRIOR to installing this product. Vehicle Owner MUST be provided the IMPORTANT VEHICLE OWNER'S INFORMATION section of these instructions after installation of this product.

Bill of Materials

- (1) Installation Instructions & Warnings
- (2) Sway Bar Relocation Brackets
- (4) Bolts & Washers



ALWAYS WEAR PROPER EYE PROTECTION & USE TOOLS SPECIFIC TO THE JOB!

STEP 1: Position vehicle on a stable, flat surface or automotive lift. Secure with jack stands & wheel chocks. Be sure engine is turned OFF and vehicle is in PARK.




STEP 2: Remove skid plate/plastic shield if equipped.



STEP 3: Remove sway bar links from both sides.



STEP 4: Remove OEM bolts holding sway bar to frame. Remove sway bar.

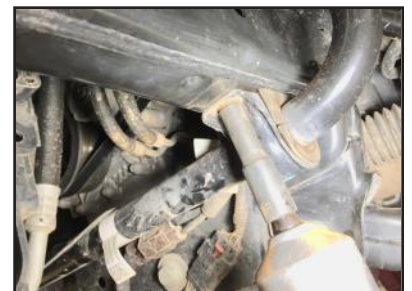

STEP 5: Install sway bar relocation bracket using OEM bolts on both sides.



STEP 6: Lift sway bar back into place. Insert supplied bolts and washers on both sides.



STEP 7: Reinstall sway bar end links and tighten to manufacturer's specs on both sides.



STEP 8: Replace skid plate/plastic shield if removed from step 2.



IMPORTANT! Check all fasteners for proper torque. Check to insure there is adequate clearance between all rotating, mobile, fixed and heated members. Check steering for interference and proper working order. Test brake system.

WARNING

This product should only be installed and adjusted by an ASE certified professional mechanic with proper tools and safety equipment.

The manufacturer of this product releases itself from any liability or consequence, inclusive but not limited to personal injury, failure of components or damage to vehicle or person as a result of installing this product.

Warranties may be declined for any parts installed by any person other than an ASE certified professional. No warranty will be made for any other OEM or aftermarket components that may be affected by the installation of this product either in use or during installation. This kit is intended for use with moderate suspension lifts, up to 3.0". Installation of this kit in conjunction with other aftermarket products will be done at vehicle owner's own risk, and voids any and all warranties.

Installation of this part MAY limit or void some vehicle manufacturer's warranties!

ALWAYS DRIVE SAFELY, REDUCE SPEED, AND WEAR YOUR SEAT BELT.

LIMITED LIFETIME WARRANTY

This product is warranted to be free of defects in materials and workmanship to the original purchaser on the vehicle in which it is originally installed. This warranty does not cover loss of time, labor, or any other components as a result of damage. This warranty may be void if this product is installed by any person other than an ASE certified professional.